

SINGER

Model

1000 Futura, 1036, 1100, 1411, 1411N, 1425, 1425N, Athena 2000 (2000A), 2001, 2010 Futura, 2010 Touchtronic, 290, 301, 401, 401A, 403, 404, 4552, 4562, 4610, 4622, 500, 501, 502, 503, 503A, 503G, 5910, 5932, 600, 600E Touch & Sew, 603, 604, 611, 620E1, 6233, 6234, 6235, 625, 626, 6267, 6268, 628, 629, 630, 631, 635, 636, 638, 639, 645, 646, 649, 6704, 6800 Series, 700, 7028, 7033, 714, 717 School, 719, 720, 724, 734, 737, 740, 750, 755, 756, 758, 760, 770, 774, 775, 776, 778, 8019, 9005, 9008, 9010, 9015, 9018, 9020, 9022, 9027, 9032, 9034, 9110, 9113, 9133, 9134, 9137, 9143, 920-3, 9210, 9217, 9224, 9240, 93220, 9323, 9334, 9408, 9410, 9416, 9420, 9423, 9430, 9432, 9444, 9417, 635E3, 635E6, 635E7, 900-3, 784, 786, 30920, 9440, 640 Touch & Sew, 6740, 9400, 9135, 9123, 9012, 1410, 1050 Futura, 6200, 6260, 266, 411, 610, 766, 729, 725, 721, 746, 708, 706, 431, 626E1, 626E6, 626E7, 625E1, 625E6, 625E7